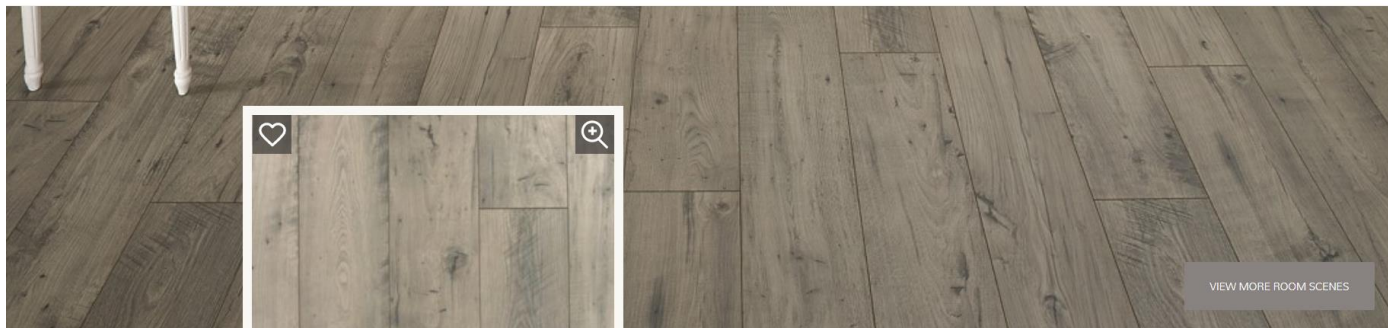


[ALL PRODUCTS](#)[LEARN ABOUT](#)[HOW TO](#)[FIND A RETAILER](#)

Rustic Legacy

RevWood Select

☐ COMPARE

ORDER SAMPLES

READY TO BUY



Silverstone Ch...



Fawn Chestnut



Cedar Chestnut



Knotted Chest...



Earthen Chestnut



Sandcastle Oak



Driftwood Oak



Doeskin Chest...



Ashlar Oak

AVAILABLE COLORS

9

FINISH

Textured. Deep graining & hand scraping add contrast & character.

WIDTH

7.5 inches

VARIATION

Medium

EMBOSSING

Embossed in Register (EIR)



Wood Care & Maintenance

Caring for RevWood, SolidWood, TecWood

Your new Mohawk **SolidWood** and **TecWood** can maintain their strength and beauty for years, while your **RevWood** flooring pairs the beauty of natural wood with easy, carefree maintenance. You'll get years of beautiful performance from your wood floors with a little preparation and know-how.

Basic Maintenance

RevWood

Use a dust mop, soft bristle broom or a vacuum cleaner with suction only (no beater bar or with the beater bar disengaged) to remove dust, dirt and loose particulate on a regular basis. Avoid wet-mop cleaning with water or liquid cleaners.

Use protective window coverings to block fade-causing UV rays and excessive heat from direct sunlight, and rearrange rugs and furniture periodically to help your floor age evenly. During inclement weather, avoid exposing your flooring to water as much as possible.

Tips for Preventing Damage

RevWood

- Carefully remove stubborn stains (like paint, oil, tar, or markers) with acetone-based fingernail polish remover.
- If one of your planks is beyond repair, use the [Quick-Step UniFix® tool](#) to remove and replace the damaged plank in minutes.

Extra Protection

Invest in high-quality floor mats and protective pads under heavy furniture for an extra layer of protection on your SolidWood, TecWood and RevWood floors. Place floor mats at entrances and exits—they collect and trap corrosive substances that can be tracked in, like dirt, sand, oil, grit, asphalt, or even driveway sealer. Placing mats in high-traffic areas—in front of vanities, kitchen sinks, and stoves—is an effective way to reduce wear.

What to Avoid

RevWood

- Wax, polish, oils, soaps, detergents, shine enhancers, or varnish shouldn't be used on RevWood.
- Applying cleaner directly to the surface of the RevWood can cause staining—lightly spray it on a cleaning cloth or damp mop instead.
- Avoid cleaning machines like spray mops, steam cleaners or mops, or power cleaners.
- While RevWood Plus can be wetmopped, when it comes to RevWood, always avoid mopping with water and dry up any water spills immediately.